
HOSE BURST PROTECTION VALVE
INSERT-TYPE

Ordering Code:	**HB-G02-Y-Z**	

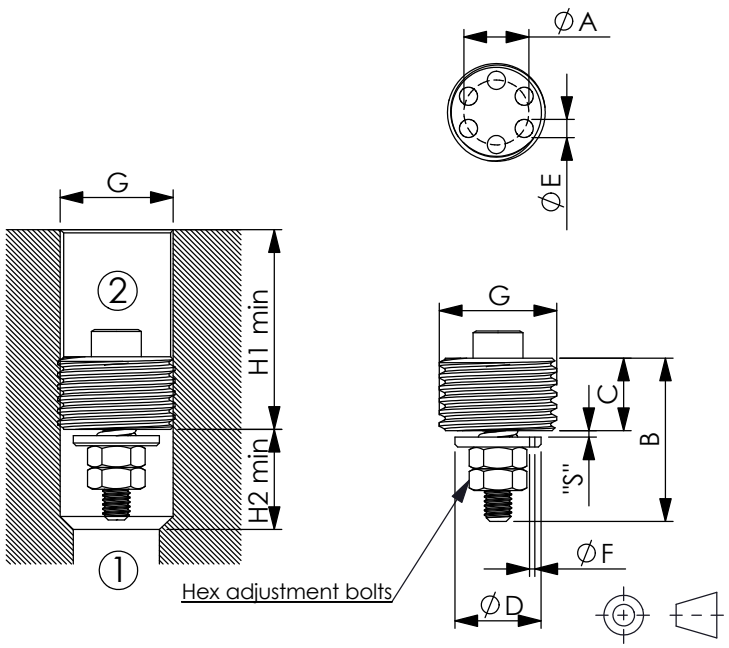


Illustrations / detail are for reference only. Data subject to change.

UNIT:mm


X=	G	A	B	C	D	E	F	H1	H2	Hex
G02	G 1/4"	8.5	18	8	9.5	2.4	on request	25	11	5.5


The valve is only supposed to be operated in case of hose failure. In the case of a hose failure, flow increases across the valve until the maximum safe limit is reached at which point the valve will close. The "S" gap must be adjusted to allow a flow at least 50% over the nominal regulated flow from the actuator. These valves can be supplied (on reguest) with an orifice on the disc, allowing an emergency lowering of load. It is recommended to fit a flow regulator valve downstream the hose burst valve, at the end of the flexible hose, to control the lowering speed at the nominal value.

Performance curves (allowance can be ±10% from the curve)
After assembling the valves are preadjustated at the following valves
"S"= 0.7 mm

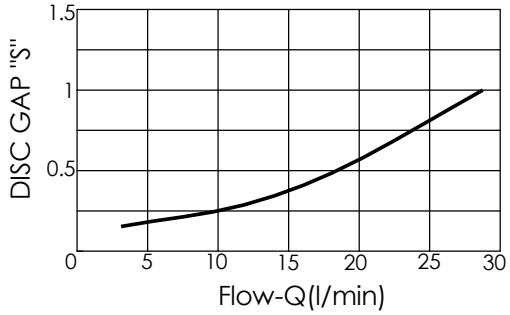

Flow performance from ② to ① depending on S-length

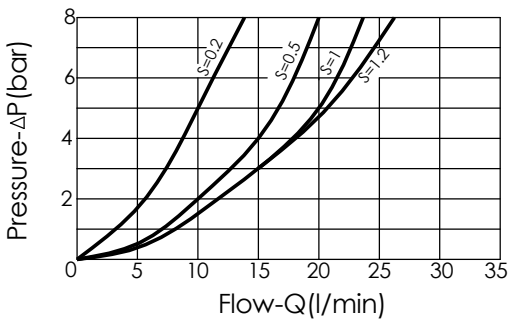

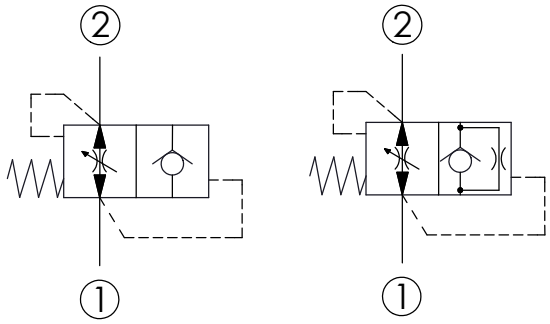

TECHNICAL DATA

Max. pressure:	350	bar

Flow: see below graphs ("S"-Q)


Special flow settings are available. Please contact factory authorized representative for ordering code.

Weight	Flow		TIGHTENING TORQUE Cartridge
kg	min	max	Nm
0.007	4	25	2±1

Y	OPERATION
20	Standard Type

Z	ORIFICE DIAMETER (mm)				
00	no orifice		10	1.0	
03	0.3		12	1.2	
05	0.5		13	1.3	
06	0.6		15	1.5	
07	0.7		19	1.9	
08	0.8		20	2.0	
09	0.9				

FITTING TOOL DIMENSION

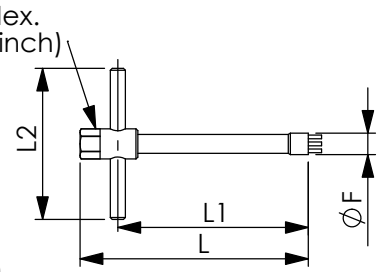

UNIT:mm

F	L	L1	L2	Tool's ordering code
11.3	120	110	60	HBG02-T